

Chairs designed to
Roll...Turn...Swivel...
and lock for safety!


T2 MATRIX - 2019 V2.2



Retrofittable to ***YOUR*** dining chairs



T2-841-22"

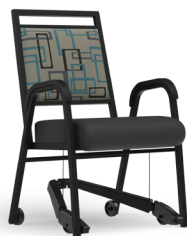

T2-841-22"-REZ



Chair Caddie A
It Rolls...Locks for Safety



Chair Caddie B
It Rolls...Turns...Locks for Safety



BY DEFAULT
ALWAYS LOCKED

T2-841-22"-CC1



450
LBS.
BRAKE

T2-841-22"-CC2
Independent Living



600
LBS.
BRAKE

941-24"-CC2
Independent Living



600
LBS.
BRAKE

941-30"-CC2
Independent Living



Watch product videos at
www.comfortek.com/t2



450
LBS.
BRAKE

T2-841-22"-CC4



600
LBS.
BRAKE

941-24"-CC4



600
LBS.
BRAKE

941-30"-CC4



T2-841SWL-22" (18" SH)
Independent Living



T2-841SWL-22" (20" SH)
Independent Living



T2-841SWL-22"-CC5 (18" SH)



T2-841SWL-22"-CC5 (20" SH)



Reducing stress and anxiety...



For you

Reduces burnout / stress
Reduced physical effort
Reduce injury
More compliant loved one



For your loved one

Dignity & self-worth
Provides structure
Smooth movements
Enjoyable mealtime routine

...Creating an enjoyable mealtime routine.

Model

1	T2-841-22-SWL	Action: Benefits: Features:	Designed to...swivel/LOCK The Swivel feature enables a person to seat themselves <u>without assistance</u> , as the seat of the chair rotates opens 90 degrees R or L. Once seated they can rotate themselves towards the table. An armed chair fitted with a seat that swivels independently from the legs of the chair. Two seat heights (18" / 20") are available.
2	T2-841-22-CC5	Action: Benefits: Features:	Designed to...swivel/roll/LOCK The Swivel feature enables a person to seat themselves <u>without assistance</u> , as the seat of the chair rotates and opens 90 degrees R or L. Once seated they can rotate themselves towards the table. <u>However, a caregiver's assistance IS required to move the seated person up-to the table.</u> An armed chair fitted with a seat that swivels separately from the base of the chair. Two seat heights (18" / 20") are available. The Chair Caddie device is attached.

3	T2-841-22-CC#1	Action:	Designed to turn/roll...and by default is always LOCKED
		Benefits:	Caregivers have confidence knowing the brakes...by default...are always activated. The brakes can only be released, allowing the chair to roll, when the caregiver standing behind the chair, depresses and holds the Brake-Release-Bar.
		Features:	An armed chair (22" wide) to which the CADDIE is attached. A Brake-Release-Bar is positioned at the top of the chair's back, in easy reach of the caregiver. The CADDIE includes 4 casters, 2 of which rotate 360°.
4	T2-841-22-CC#4	Action:	Designed to...turn/roll/LOCK
		Benefits:	The Chair/CADDIE enables a caregiver to move a seated person up-to and away-from the table without the need to push/pull/shove/twist. Assistance of a caregiver is required to activate the brakes.
		Features:	An armed chair (22" wide) to which the CADDIE is attached. It includes 4 casters (2 of which rotate 360°). Rear casters include foot/toe activated brakes.
5	Titan 941-24-CC#4	Action:	Designed to...turn/roll/LOCK
6	Titan 941-30-CC#4	Benefits:	The Chair/CADDIE enables a caregiver to move a larger seated person up-to and away-from the table without the need to push/pull/shove/twist. Assistance of a caregiver is required to activate the brakes.
		Features:	An armed chair (24" / 30" wide) to which the CADDIE is attached. It includes 4 casters (2 of which rotate 360°). Rear casters include foot/toe activated brakes.
7	Butterfly Tables	Action:	Designed to lift...and extend individually
8		Benefits:	Individual tops are adjustable and extendable. Persons seated in wheelchairs / geri chairs are able to feed themselves as the top of each table is positioned appropriately.
		Features:	Each table top can be individually positioned to a specific height required by a seated person.
9	CADDIE #A Retrofit	Action:	Designed to...roll/LOCK (DIY)
		Benefits:	The CADDIE enables a caregiver to move a seated person up-to and away-from the table without the need to push/pull/shove/twist
		Features:	DIY...A metal platform complete with 4 inline casters which attaches to the base of an existing chair. One of the casters includes a foot/toe activated locking lever.

10	CADDIE #B Retrofit	Action:	Designed to...turn/roll/LOCK (DIY)
		Benefits:	The CADDIE enables a caregiver to move a seated person up-to and away-from the table without the need to push/pull/shove/twist
		Features:	DIY...A metal platform complete with 2 inline and 2 rotating casters which attaches to the base of an existing chair. One of the casters includes a foot/toe activated locking lever.
11	T2-841-22-CC#2	Action:	Designed to turn/roll...LOCKABLE by User
		Benefits:	Designed for persons <u>who live independently</u> , but experience difficulty “scooting” themselves up-to the table. Persons can confidently be seated knowing the brakes prevent the chair from rolling away. Once seated, <u>the seated person releases the brakes</u> , enabling them to propel themselves (sit-walking) up-to the table using both hands/feet for guidance.
		Features:	An armed chair (22” wide) to which the CADDIE is attached. The Brake-Release-Lever is positioned beside the seat of the chair...in easy reach of the seated person. The CADDIE includes 4 casters, 2 of which rotate 360°
12	941-24-CC#2	Action:	Designed to turn/roll...LOCKABLE by User
12	941-30-CC#2	Benefits:	Designed for persons <u>who live independently</u> , but experience difficulty “scooting” themselves up-to the table. Persons can confidently be seated knowing the brakes prevent the chair from rolling away. Once seated, <u>the seated person releases the brakes</u> , enabling them to propel themselves (sit-walking) up-to the table using both hands/feet for guidance.
		Features:	An armed chair (24” / 30” wide) to which the CADDIE is attached. The Brake-Release-Lever is positioned beside the seat of the chair...in easy reach of the seated person. The CADDIE includes 4 casters, 2 of which rotate 360°.
	T2-841-22-REZ	Action:	Designed to...roll/LOCK
		Benefits:	This Chair/REZ enables a caregiver to move a seated person up-to and away-from the table without the need to push/pull/shove/twist
		Features:	An armed chair with the Royal-EZ lever device attached.

Chairs...that roll

Description:

Chairs that roll...include either the Royal-EZ or CADDIE attachment enabling a caregiver to move a seated person up-to and away-from the table without the need to push/pull/shove/twist. A caregiver's assistance is required to move the chair and activate/de-active the safety brake lever.

Chairs...that swivel

Description:

Chairs that swivel...enables persons with limited mobility to seat themselves as the seat of the chair rotates to an open position - 90 degrees R or L. The seat automatically locks at this position ensuring safety for the resident as they are being seated. Once seated, he/she can release the swivel lock and rotate themselves back towards the table. The swivel feature can be operated by the seated person or by a caregiver. Two seat heights are available (18" and 20")

Chairs...that swivel and roll

Description:

Chairs that swivel/roll...enables a person with limited mobility to seat themselves as the seat of the chair rotates to an open position - 90 degrees R or L. The seat automatically locks at this position ensuring safety for the resident as they are being seated. Once seated, he/she can release the swivel lock and rotate themselves back towards the table. The swivel feature can be operated by the seated person or by a caregiver. Two seat heights are available (18" and 20")

The Royal-EZ lever attachment enables the chair to be rolled forward should that be necessary. The assistance of a caregiver is required to operate the Royal-EZ.

Chairs...that turn and roll

Description:

Chairs that turn/roll...enables a caregiver to freely move a seated person up-to the table. These chairs include a metal platform attached to the bottom of the chair which features two (2) inline and two (2) rotating casters. A caregiver's assistance is required to activate the rear locks for the safety of the resident.

Tables...that lift/extend

Description:

Tables that lift/extend...enables the tops of each table to be adjusted specifically to meet the need of each resident. Persons seated in wheelchairs or geri chairs are able to feed themselves as their table top is positioned appropriately for their needs.